



Home / General Information / Toner Reset Instructions For DCP1610W and DCP1510

Toner Reset Instructions For DCP1610W and DCP1510

Posted on 11/07/2017 by Easyink Support

When a new toner is installed in a DCP1610W and DCP1510 printer, a reset gear should turn and trigger a switch to reset the toner counter.

Sometimes the toner counter doesn't get reset and realigning the reset gear is a little bit too techy for most users.

We've been sent the following instructions but we have yet to prove that it works...

1. Press the *MENU* button.
2. Hit the down arrow until you see *info* on the display.
3. Press the *OK* button.
4. Hit the down arrow until you see *reset drum* on the display.
5. Press and hold the *OK* button until you see *reset* on the display.
6. Press the *START* button.
7. Press the up arrow until you see the value *10*.
8. Press the *OK* button and you should see *accepted* on the display.
9. Press *STOP* until the main menu appears on the display.

The toner message should now be reset.

Please leave a comment if you find this guide useful or there is anything we can improve to make it easier to follow.

[Toner reset instructions for HL printers that use TN1070 cartridges.](#)

[Toner reset instructions for MFC printer that use TN1070 cartridges.](#)

This entry was posted in [General Information](#).
Bookmark the [permalink](#).

This article was helpful

8 people found this article useful

Search Easyink Knowledge Base

Search Knowledgebase...



Printer Cartridge Supplies 0800 893 797

- [General Information](#)
- [Printer Faults](#)
- [Printer Tips and Tricks](#)
- [Buy Cartridges](#)
- [Blog](#)
- [Facebook](#)
- [FAQ](#)

Click Here To Shop At Easyink Now



Support Email: [support \[at\] easyink.co.nz](mailto:support@easyink.co.nz)